i-PAL

Installation and Operating Guide

ACCESS Cabinet Systems

i-PAL Integrated Proximity Access Control Locking Handle

By controlling the access to a cabinet, the risk of intrusion, sabotage and user error is significantly reduced. The i-PAL handle incorporates a proximity reader, LED, buzzer and locking mechanism. Only valid cardholders can gain access to the rack.


Installation Instructions

1. Remove the handle from the mounting frame and then insert the frame through the bottom aperture of the door from the inside of the door, but making sure the electronic locking mechanism is always supported.
2. Clip plastic handle mounting moulding into door cut-outs.
3. Screw base of the gearbox to the plastic handle.
4. Screw the electronic lock part to the plastic moulding using the 2 long screws provided, making sure the screws stop any movement of the back box but do not distort the moulding, making sure the cable is not trapped by the screws.
5. From the outside take the swing handle and push-fit this into the handle mounting frame.
6. From the inside, add the top and bottom locking rods to the gearbox, then add the top piece and screw the long machine screw including serrated washer into the handle but making sure it has located onto the square boss.



i-PAL

Installation and Operating Guide

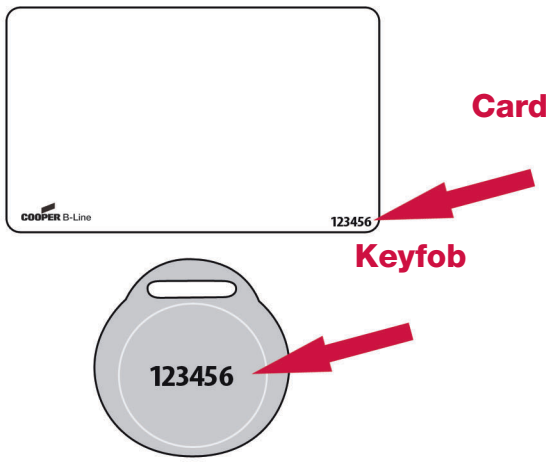

Cards and Keyfobs :

Each i-PAL kit is supplied with 3 unique user cards. Three delete cards with corresponding numbers to user cards are included to disable the user cards.

Program Card:

Basic operating instructions are printed on the back of the program card. Use the program card to add or delete valid users.

Each i-PAL kit is supplied with one program card.

Add User(s):

1. Present the program card to the handle.
2. LEDs on the lock inside the door alternate.
3. Present the user card (s) to validate.
4. Present the program card to quit or wait for the unit to time-out.

Delete User(s):

1. Present the program card to the handle.
2. LEDs on the lock inside the door alternate.
3. Present the corresponding delete card(s) to invalidate.
4. Present the program card to quit or wait for the unit to time-out.

Erasing the i-PAL Memory

Erasing the i-PAL memory clears all data the handle remains unlocked until at least one card is added.

Status Guide

LED	Activity	Audio	Status
Blue & Green	Blue Steady Green Flashing	No	Unit un-programmed factory default setting
Blue & Green	Blue Flashing Green Flashing	Yes	Programme mode
Blue & Red	Blue Steady Red Steady	No	Handle locked - at least one card has been validated

EDP bvba sprl

Kalkenstraat 91-93 B-8800 Roeselare (Roulers) - Belgium
Tel. +32(0)51/25.06.10 Fax +32(0)51/24.02.57
Email: edp@eldeco.be website: www.rack19.be or www.eldeco.be or www.eldeco-edp.eu

willsher&quick